

Key Features

- 2.2 ~ 2.7 GHz
- 0.8 dB noise figure 25.0 dBm output IP₃ .
- 15.0 dB Gain
- •
- 12.0 dBm P_{1dB} 1.5:1 VSWR .
- Single Power Supply
- **RoHS** Compliant
- MADE IN USA

RoHS **Applications**

- 3G
- · ISM Band
- Security System
- Measurement
- Fixed Wireless



Absolute Maximum Ratings


6.0 A 50
V 400
m 10
150
-55~125
-40~85
/W 220


Operation of this device above any one of these parameters may cause permanent damage.

Specifications

Summary of the electrical specifications WZA107 at room temperature

Index	Testing Item	Symbol	Test Constraints	Min	Nom	Max	Unit
1	Gain	S ₂₁	2.2 – 2.7 GHz	13	15	17	dB
2	Gain Variation	ΔG	2.2 – 2.7 GHz		+/- 0.75	+/-1.0	dB
3	Input VSWR	SWR1	2.2 – 2.7 GHz		1.5:1	1.8:1	Ratio
4	Output VSWR	SWR ₂	2.2 – 2.7 GHz		1.5:1	1.8:1	Ratio
5	Reverse Isolation	S ₁₂	2.2 – 2.7 GHz	15			dB
6	Noise figure	NF	2.2 – 2.7 GHz		0.8	1.2	dB
7	Output Power 1dB compression Point	P _{1dB}	2.2 – 2.7 GHz	10	12		dBm
8	Output-Third-Order Interception point	IP ₃	Two-Tone, P _{out} = 0 dBm each, 1 MHz separation	22	25		dBm
9	Current Consumption	l _{dd}	@ 25 °C		25		mA
10	Power Supply Voltage	V _{dd}		+4.7	+5.0	+5.3	V
11	Thermal Resistance	R _{th,c}	Junction to case			220	°C/W
12	Operating Temperature	To	Case temperature at the bottom of the housing	-40		+85	°C
13	Maximum Average RF Input Power	P _{IN, MAX}	DC – 13 GHz			10	dBm
14	Spurious	P _{spur}	DC – 13 GHz	-70			dBc



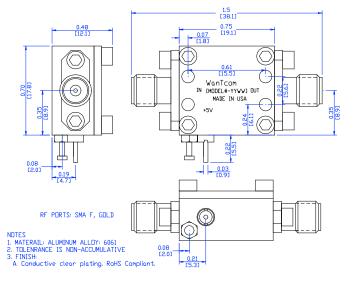


Ordering Information


Model Number WZA107

Outline, WP-30 Housing

Specifications and information are subject to change without notice.



Typical Performance

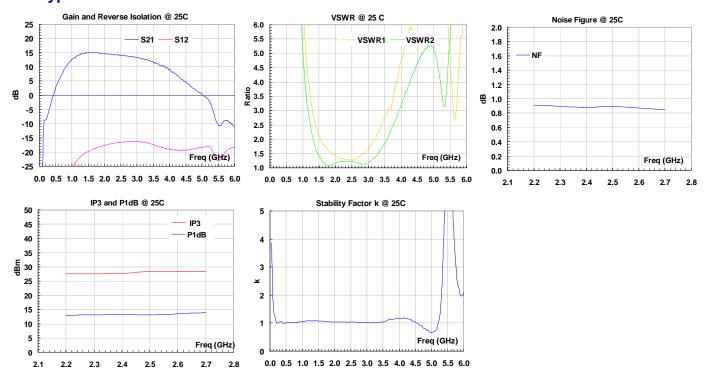

Application Notes:

A. SMA Torque Wrench Selection

Always use a torque wrench with $5 \sim 6$ inch-lb coupling torque setting for mating the SMA cables to the amplifier. Never use torque more than 8 inch-lb wrench for tightening the mating cable to the connector. Otherwise, the permanent damage will occur to the SMA connectors of the amplifier. 8710-1582 (5 inch-lb) is one of the ideal torque wrench choice from Agilent Technology.

B. Mounting the Amplifier

Use three pieces of #2-56 with longer than 9/16" screws for mounting the amplifier on a metal-based chase. Flat and spring washers are needed to prevent the screw loosening during the shock and vibration. Always use the appropriate torque setting of the power screwdriver to mount them.

Specifications and information are subject to change without notice.